


Weight & Height Limitations

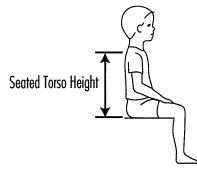

STAR

- 25 - 65 lbs. (11.3 - 29.5 kg)
- 57 in. (144 cm) tall or less
- over 1 year of age
- 20 in. (50 cm) or less seated torso height

STAR plus

- 25 - 90 lbs. (11.3 - 40.8 kg)
- 57 in. (144 cm) tall or less
- over 1 year of age
- 20 in. (50 cm) or less seated torso height

STAR Special Needs

- 25 - 105 lbs. (11.3 - 47.5 kg)
- 57 in. (144 cm) tall or less
- over 1 year of age
- 20 in. (50 cm) or less seated torso height

Installation on the school bus seat


Note: For STAR Special Needs, refer to the installation instructions on pages 8-10 first.

Important Note: STAR may be secured to a standard 222 school bus seat unless your state code requires that the seat be FMVSS 210 reinforced. Check your state codes.


⚠ WARNING! DEATH or SERIOUS INJURY can occur:

- Follow all instructions on the child restraint and in this manual. Failure to follow the manufacturer's warnings for proper use of this child restraint system can result in serious injury or death.

1. Position the STAR restraint on the bus seat. Place the three upper cam wrap straps around the top of the school bus seat back. Insert the two lower cam wrap straps through the opening at the rear of the school bus seat cushion. **A**

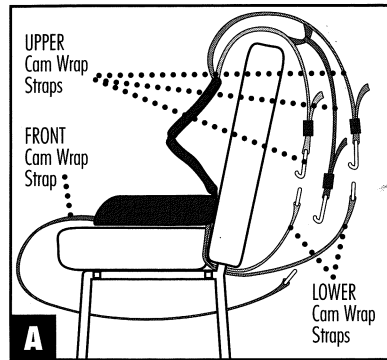




2. If the opening at the rear of the school bus seat cushion is blocked, lift the school bus seat cushion as shown in **B**. Thread the two lower cam wrap straps through the opening. Lower the seat cushion to its original position and lock into place. Be sure the lower cam wrap straps are not trapped within the seat cushion.

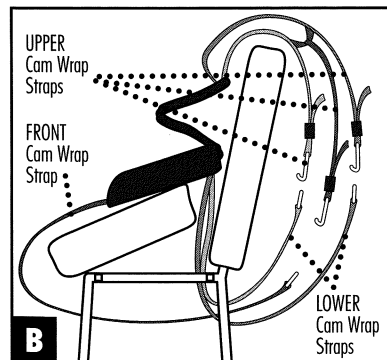

3. Connect the left upper cam wrap strap to the left lower cam wrap strap. Connect the right upper cam wrap strap to the right lower cam wrap strap. Pull adjuster straps to tighten both outside cam wrap straps. **C & D**

Important: Be sure to secure and tighten the two outer cam wrap straps before connecting the middle cam wrap strap. Proper tightening will compress the foam at the top of the school bus seat by approximately a half inch.

4. Connect the middle upper cam wrap strap to the front cam wrap strap. Pull adjuster strap to tighten. **E**

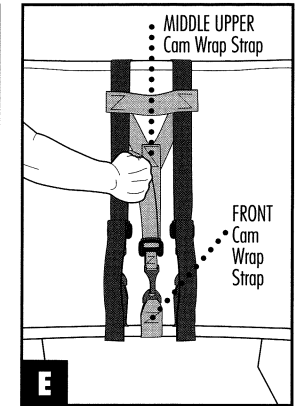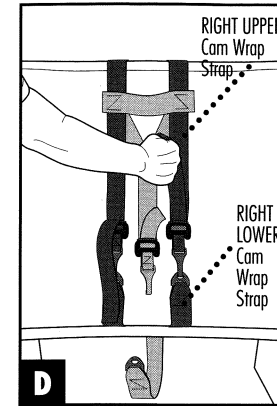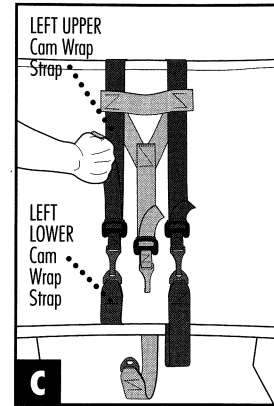

5. Verify the security of the restraint by moving the rear of the seat base sideways. It should move less than an inch.

6. Once all straps are tight and secured, use the plastic keeper on each strap to secure the free ends of the three upper cam wrap straps. **F**

Important: Straps must appear as in **G** after installation is complete.

